

KingTel KT2088 話機自動佈署設定




1. 設定話機 IP

按下話機 Menu 鍵



選擇 System Setting

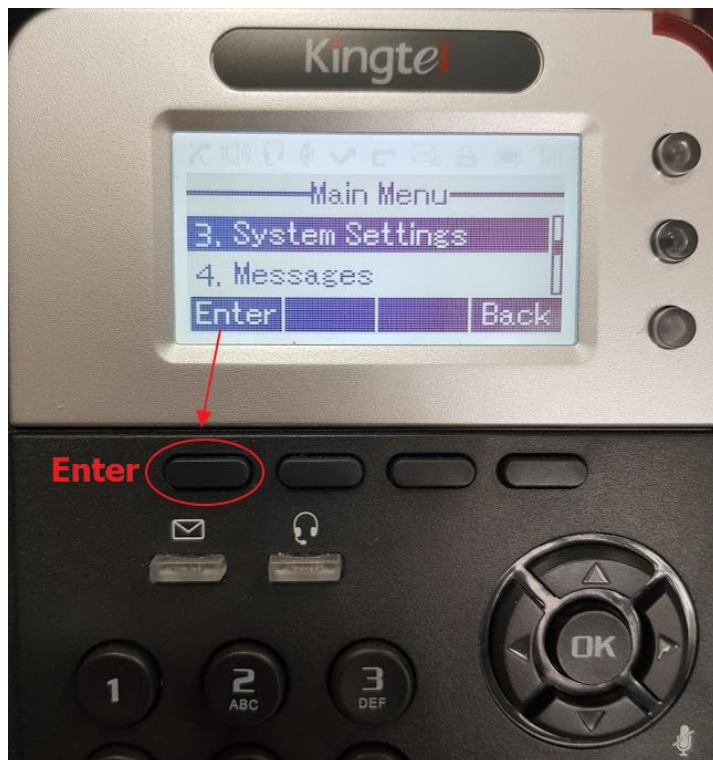

選擇 Advanced Settings



選擇 Network



選擇 Advanced



選擇 LAN Port



選擇 IPV4



選擇 Static



設定 IPv4 位址



設定網路遮罩



設定通訊閘道



設定 DNS 120.116.1.2



完成後按下 Save。

修改話機自動佈署設定


透由瀏覽器連上話機 IP，預設帳號密碼為 root / goodtalk



id/pwd
admin/siptn2088

位

於頁面右上角，切換頁面語系，選擇 Tradition Chinese。

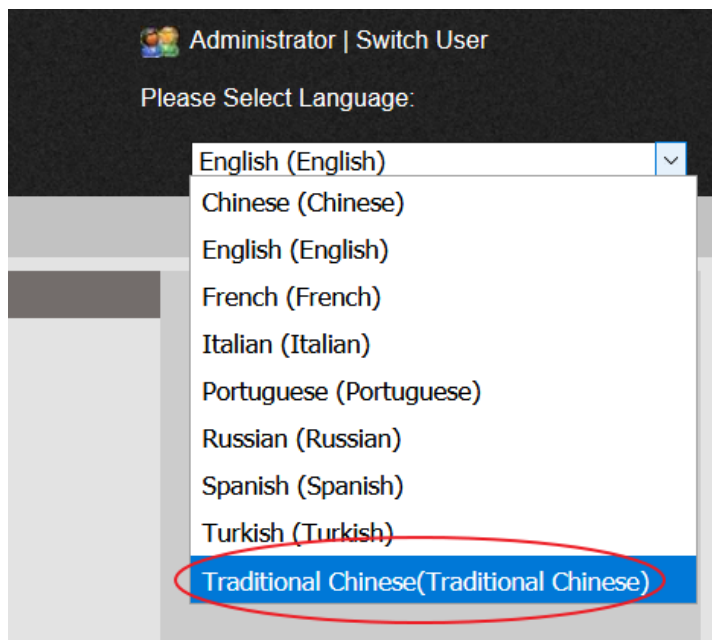

點選話機維護 > 進階



點選自動升級

目前位置: 話機維護 > 進階

進階

訊息記錄等級 >>

不記錄

呼叫記錄

SIP

LCD

系統日誌傳送到伺服器

系統日誌伺服器位址

封包抓取功能

 **自動升級 >>**

協定選擇，HTTP 輸入伺服器位址 sip.tn.edu.tw:9999/KT2088/

目前位置: 話機維護 > 進階

進階

訊息記錄等級 >>

自動升級 >>

PNP啟用	<input type="radio"/> 開啟 <input checked="" type="radio"/> 關閉 ?
PNP更新週期(分鐘)	<input type="text" value="60"/>
啟用自動升級	<input checked="" type="radio"/> 開啟 <input type="radio"/> 關閉
Option:	<input type="text" value="Enabled"/> <input type="text" value="66"/> (預設66, 範圍: 1~254)
協定	<input type="text" value="HTTP"/>
韌體伺服器位址	<input type="text" value="sip.tn.edu.tw:9999/KT2088/"/>
用戶名稱	<input type="text"/>
密碼	<input type="text"/>
自動下載韌體檔案	<input checked="" type="checkbox"/>
自動下載設定檔案	<input checked="" type="checkbox"/>

 **sip.tn.edu.tw:9999/KT2088/**

按下立刻升級 > 確認



A screenshot of a settings menu. The menu items are: AES啟用 (AES Enable) with radio buttons for 關閉 (Off) and 開啟 (On); AES密鑰 (AES Key) with an empty text input field; and 下載檔案名稱 (Download File Name) with a dropdown menu showing 預設 (Default). Below these items is a button labeled 立刻升級 (Upgrade Immediately), which is circled in red. A red arrow points from this button to another button labeled 確認 (Confirm), which is also circled in red.

若話機有設定正常，此時面版會顯示正確時間及號碼。